



ELECTRIC GLASS WASHERS



Congratulations on your purchase of the finest Glass Washer made.

Bar Maid® machines are manufactured and tested to meet the toughest safety and sanitation standards. We are pleased to offer a 2-year limited warranty on our glass washers. ***Registration with Bar Maid Corporation is required to receive the 2nd year of warranty.***

Please follow these instructions carefully. Failing to do so in some cases may damage the machine, cause injury to the operator and/or void warranty.



Bar Maid Corporation
2950 N.W. 22nd Terrace • Pompano Beach, FL 33069-1045
Tel: (954) 960-1468 • Fax: (954) 960-1647
www.bestinthebar.com



SAFETY INFORMATION

THESE CAUTION MARKS ARE LOCATED THROUGHOUT THIS GUIDE.



= Lightning flash within a triangle, is to alert the user of the presence of dangerous voltage that may create a risk of electric shock. Do not open cover. No user serviceable parts within.



= The exclamation point within a triangle is to alert the user to:

- “CAUTION” important information regarding the care and use of this equipment
- “WARNING” possibility of personal injury



= Power off



= Power on

IMPORTANT SAFEGUARDS! PLEASE READ THIS FIRST

Follow these basic safety precautions when using this electrical appliance to reduce the risk of fire, electric shock and/or personal injury.



WARNING: Keep all loose items including hair, clothing and towels clear of machine brushes at all times – entanglement could cause bodily harm to the machine operator.



WARNING: “A” Model Upright machine motors are water resistant but NOT SUBMERSIBLE. Do not use “A” Model Upright machines in sinks or tanks where there is a risk of falling over or submersing the motor.



WARNING: Observe the water level labels on machines. Do not overfill tanks. Never fully submerge any Glass Washer motor.



WARNING: Special SS Model cord requires original replacement part available only from Bar Maid Corporation. Contact Bar Maid Corporation for replacement.



WARNING: Motors may get hot with extended use. Turn off when not in use.



WARNING: Plug unit **only** into a **GROUND**ED outlet that matches the voltage/cycle as listed on the motor. Outlet must be equipped with a UL/CSA approved ground-fault circuit interrupter (G.F.C.I.).



WARNING: Keep electrical cord clear of brushes and water.



WARNING: Switches and switch boxes (for SS Model) must **NOT** contact water. **ATTACH BOX TO A DRY LOCATION with screws provided.**



WARNING: This product can expose you to Bisphenol A, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



CAUTION: DO NOT operate machine out of water.



WARNING: DO NOT use any machine if the power cord or motor housing is cracked or damaged.



CAUTION: Ensure brushes are securely in place before turning machine on.



CAUTION: Use machine only for the purpose it was intended.



WARNING: Disconnect from the power source before servicing.



WARNING: Do not use if any parts are cracked, broken or leaking oil.



CAUTION: Do not attempt to open or service the Submersible (SS) motor. No user serviceable parts. Call Bar Maid Customer Service at 954-960-1468 for service assistance.



CAUTION: Use only genuine Bar Maid® replacement parts.



CAUTION: Keep machines upright!! Lying on side may cause damage.

OPERATING INSTRUCTIONS – ALL MODELS



WARNING: Place unit in sink and fill with warm water to the top of the lowest brushes or the water line label. Water must be comfortable to touch. Add a quality liquid “low suds” detergent such as Bar Maid® LoSUDS®. Granular (powder) detergents are not recommended as they can be abrasive and cause premature wear to gears and bearings.



WARNING: Plug machine into a grounded, G.F.C.I. (ground-fault circuit interrupter) equipped outlet. Test and reset. Turn machine on.



IMPORTANT NOTE: SS Model Submersible machines will heat water but are equipped with a thermal cut-off to protect from over-heating. Excessively hot water may cause the machine to shut off. If this occurs, drain sink and refill with only room temperature water. Wait 20 minutes for machine to cool down, test and reset the G.F.C.I. at the end of the power cord and then restart. If machine fails to start, test circuit breakers and/or receptacle.



For best results, wash one glass at a time. **Always** start the Glass Washer before placing glass over the brush. The center brush scrubs the inside of the glass while the four outside brushes wash the outside. If taller glasses are washed, a longer center brush can be used, (see Brushes). Rinse in fresh water in second sink, then in third sink sanitize the glass. Let drain.

CARE AND MAINTENANCE

A FEW SIMPLE PROCEDURES WILL HELP ENSURE A LONG, TROUBLE-FREE LIFE:

1. When closing for the day, drain sink and wipe off machine
2. LET WASHER DRY overnight.
3. Once per month, carefully lift off rubber band that protects gear housing. Immerse machine in enough water to cover brushes and add a half cup of vinegar or bleach. Run machine for ten minutes, rinse thoroughly and replace band. Check overall condition. If any parts appear cracked or damaged, please call 954-960-1468. Troubleshooting advice can also be found online at www.bestinthebar.com.

2-YEAR LIMITED WARRANTY

Bar Maid Corporation provides a one year Limited Warranty with a second year of coverage providing the owner sends in the warranty registration envelope within 21 days of purchase. You **MUST REGISTER** to get year 2 of the warranty. For warranty service information please call 954-960-1468.

BRUSHES, LOSUDS, SANITIZER AND TEST STRIPS



BRS-732SG
Perfect brush for
Shot Glasses



BRS-930
Wide coffee pots
and pitchers



BRS-935
Narrow top
coffee pots



BRS-950
Margarita &
Martini glasses



BRS-980
4 inch Muffin
Pan Brush



BRS-930
Wide coffee pots
and pitchers



BRS-917SL
BRS-920SL
BRS-922SL
BRS-975SL
Universal
Slotted Brush



BRS-917
BRS-920
BRS-922
BRS-975
Pinned Brush



BRS-1722, BRS-1720SL
Electric Glass Washer
Replacement Brush Set



DET-200
Detergent for electric
glass washers



DIS-201
Quaternary Tablet Sanitizer
for Kitchen and Bar,
3rd Sink & Surface



DIS-202
Quaternary Sanitizer
Test Strips



DIS-302
Chlorinated Sanitizer
Test Strips

BAR MAID OFFERS HUNDREDS OF PRODUCTS!



GP-100
Glass
Polisher



CR-100P
Glass Rimmer



TAP-BRUSH
Beer Tap Cap Brush



TAP-CAP
Beer Tap Cap



CR-1600
Shooter
Tube Rack



GP-1M
Glass Polishing Wand



TAP-STRIP
Drip Tray
Odor Inhibitor



CR-835W-N
82oz Scoop



CP-7000
Cutlery Polisher



FB-TS20, FB-TS30
FB-TS35, FB-TS40
Floor Drain Trap Seal



FLY-BYE
Fruit Fly Traps



WEG-816
Citrus Wedger



BMP-5100B
1oz Premium
Pourer

VISIT WWW.BESTINTHEBAR.COM TO SEE OUR COMPLETE LINE OF PRODUCTS.